Owner's Manual Bruce 22

6.3 Visibility from the Main Steering Position

Information

Operator vision from the helm can be obstructed by high trim angles of the craft and other factors caused by one or more of the following conditions:

- · Loading and load distribution
- Speed
- · Sea conditions
- Rain and spray
- · Darkness and fog
- Persons or movable gear in operator's field of vision

The international regulations for preventing collisions at sea (COLREG's) and the rules of the road require that a proper lookout be maintained at all times and observance of right of way. Make certain no other vessels are in the path before proceeding.

6.4 Navigation Lights

Information

Night boating requires running lights. The craft is fitted with the following navigation lights:

| Bi-colour | Foredeck | |
|-----------------|--------------|--|
| All-round white | Plug in post | |

The running/navigation lights are controlled at the switch board.

| <u>^</u> | Caution | Check for proper operation of navigation lights before heading out and carry replacement bulbs for all navigation lights |
|-------------|---------|--|
| \wedge | Caution | Navigation lights may be marked with expiry dates. Ensure that they are replaced as required. |
| \triangle | Caution | Always replace bulbs with one of the same wattage. |

